



## WATER STORAGE SOLUTIONS



### URBAN


Urban is a stylish design with clean contemporary lines, the curved lines provides a sharp yet soft shape that sits neatly against a wall. The surface has a tactile sand like grain to it and is available in three colours.

URBAN270S - Sandstone

URBAN270G - Granite

URBAN270C - Charcoal

### CONNECTION POINTS

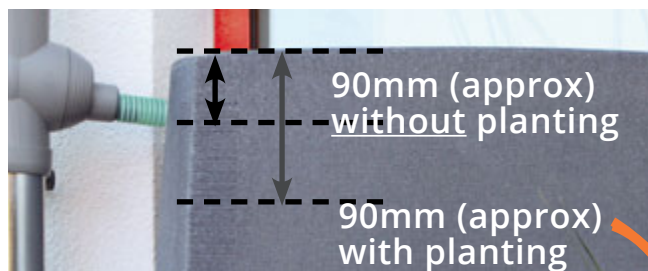


(h): 1050mm x (w): 790mm x (d): 410mm

### ACCESSORIES



- **Universal Fit Diverter with Filter** (tank connector and hose) RC2BL, RC2G, RC2WH or RC2B in black, grey, white or brown

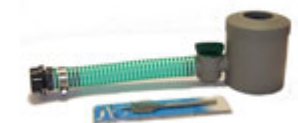

- **Universal Fit Diverter with Tap** (tank connector and hose) RC1G, RC1B in grey, or brown



- **Universal Long Link Kits** - 9000123U, 9000123UU2, or 9000123UU5 for the 1, 2 or 5 metres lengths



- **3/4" Tank to Tank Connection Kit** - 9000326



- **Hole-saw kit with rubber gommets** required to make hole and seal for tank to tank connector

Delivered free along with the waterbutt (otherwise delivery charge of £5 will apply)

### INSTALLATION INSTRUCTIONS


Comes with either brass or chrome tap (depending waterbutt colour). To fill the Urban, we recommend using the our Universal Fit Diverter with Filter (or with Tap). You may also use other UK diverters but you'll need to refer to the instructions that come with that particular diverter.

Where the waterbutt cannot be located within 30cm of the downpipe, ask about our longer Universal Long Link Kits available to order in 1, 2 or 5 metres lengths. Order the closest size above the required length and cut down.



### 1. Setting Up

Site the Urban on a firm, level surface, adjacent to the downpipe.

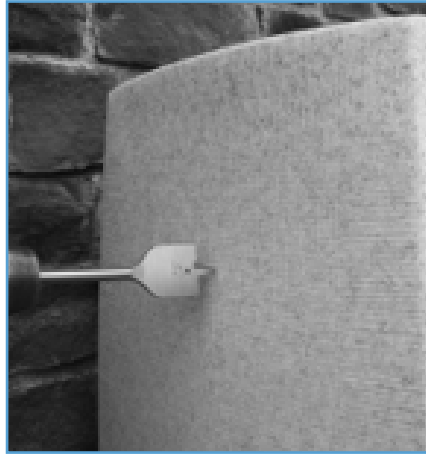

### 2. Fitting a Universal Fit Diverter with Filter or with Tap

Measure down 90mm (or 250mm if using the plant pots included) from the lip of the water butt. Using the 32 mm flat bit provided, offer the drill to the marked point, proceed to drill the hole. Hold the back nut and rubber seal on the inside of the hole and screw on the hose tail.



### 3. Connecting the Tap

Screw the 3/4" brass tap provided in the kit into the 3/4" BSP connection thread. If necessary, use PTFE tape when installing the tap to create a more watertight seal and to ensure the tap sits in the correct position. Connecting a tap is optional. Other 3/4" tap fittings can be used - a pump or hose, for example.



### 4. Connecting tanks

Tanks can be linked together using a 3/4" tank-to-tank connector (250 mm).



### 5. Childproof Lid

To remove the lid, push down on one side and lift at the opposite end



### 7. Winter Care Precautions

To prevent any damage from being caused, columns must be drained completely and disconnected from the rainwater inlet during freezing weather conditions.