




- SIDE-FIX RAFTER BRACKETS



1. Fit the first bracket to the side of the first rafter on one outer edge of the roofline.



2. Create a fall of 1:600 to 1:350 (max) tying string from the first bracket (i.e. the highest) at one end of the gutter run to the last bracket (i.e. the lowest one - the one nearest the outlet and the downpipe) at the other end.

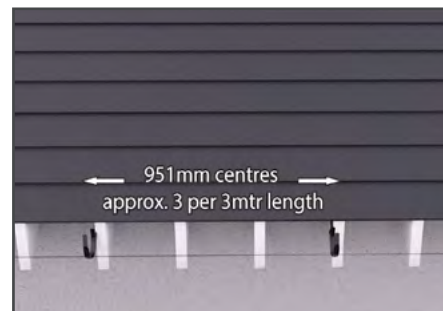

3. Fit all the other brackets with approx. 951mm* centres along the 'fall'.

(*This guidance should be a helpful guide for installing side-fix rafter brackets in general, but this figure applies specifically to Infinity guttering - you should refer to the manufacturer's instructions for the ideal distance between brackets for any other brand of gutter).

N.B. Infinity gutters can be installed without a fall if this is preferred or necessary.



4. Fit the gutter lengths into the brackets and fold over the brackets' two 'tabs' to secure the gutter in place.



N.B. Always make sure to have a gutter union/connector (wherever you need to join two gutter lengths, an angle, or prefab outlet) near a bracket to support the joint, especially if you have elected not to use the 'bead connectors' which sit inside the front scroll or 'bead' of Infinity gutters, angles and prefab outlets - halfway into each across the joint - offering additional support.

Watch the video version at: rainclear.info/STFBracketsInstall

