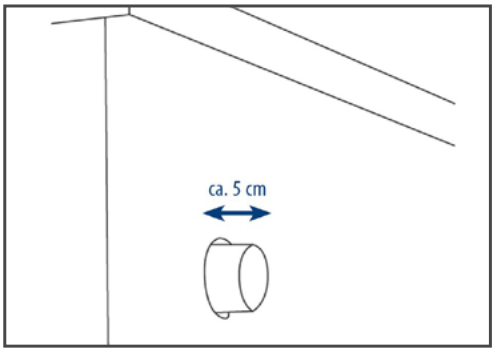

1. Check the length of the fascia pipe coming from the wall and cut to approx. 5 cm if necessary (chamfer the parapet pipe if necessary).

Note: Fill the gap between the masonry and the fascia pipe with sealant.

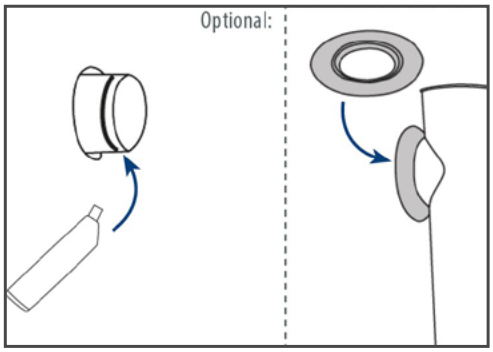

2. Apply sliding material to the chamfered end of the pipe.

Optional: Fit optional 'Rubber seal for pipe inlet' product on the inlet pipe. (Call and ask if this solution is of interest - it's not currently listed online - but we can bespoke order it for you)

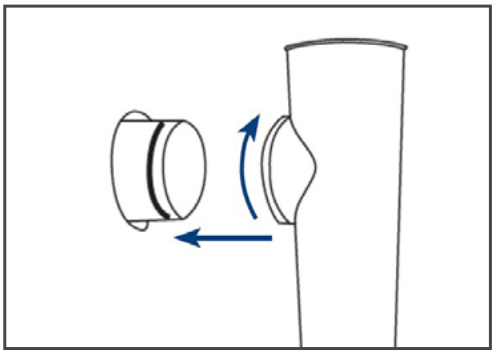

3. Push the fascia connection piece onto the fascia pipe with low pressure and a slight twisting movement.

Attention: Double check the fit of the gasket.

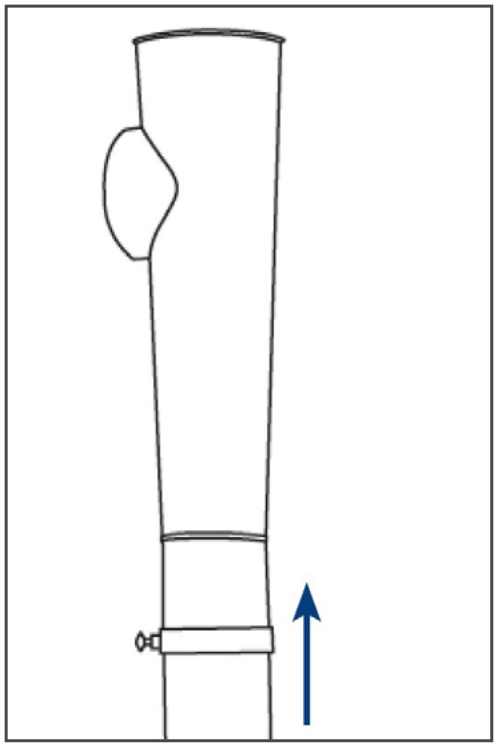

4. Finally, continue with the downpipe installation (allowing for any potential thermal expansion in the length of the downpipe).